


HDW 750 P

Recalling - ALL FILE

1. Put a battery on the camera



2. Switch the camera on

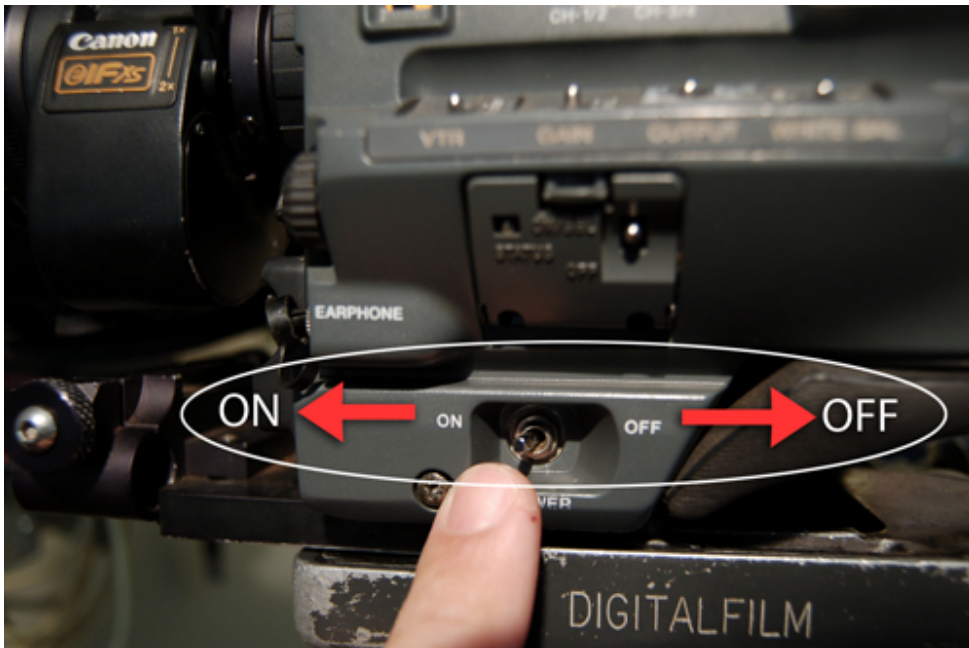

3. Open the Time code/Audio door



4. Push the orange button



5. Insert Memory stick, Make sure it's pushed all the way.




Pushed in all the way.



6. In the viewfinder you will see MEMORY STICK ACCESS flashing  
The camera is accessing the memory stick.


## Accessing the Menu

1. Push the rotary encoder in

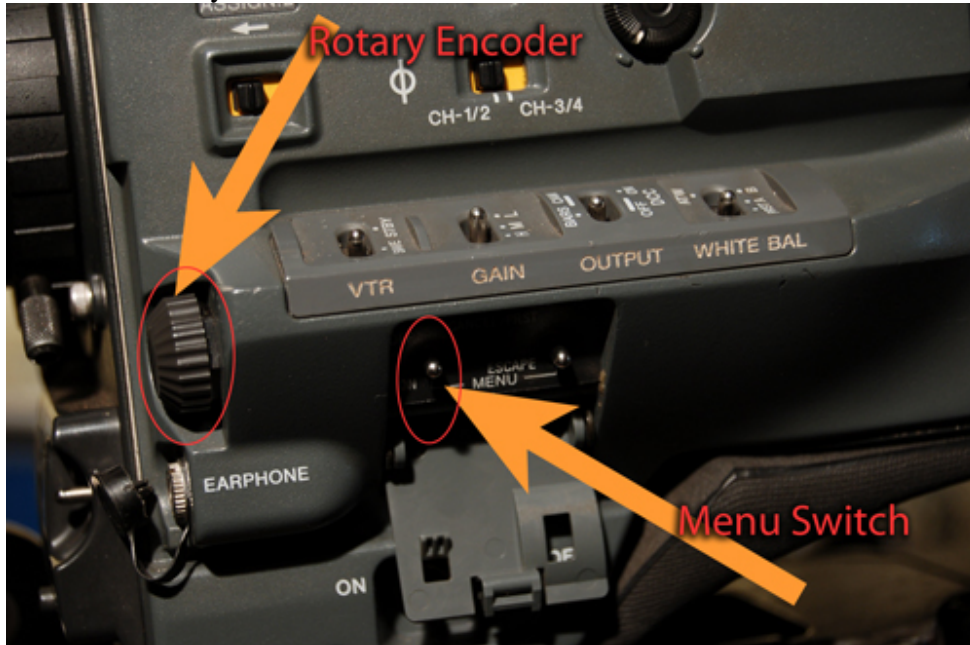


2. While pushing the rotary encoder in switch the menu on (down)

3. You will see in the viewfinder the 'Main Menu'

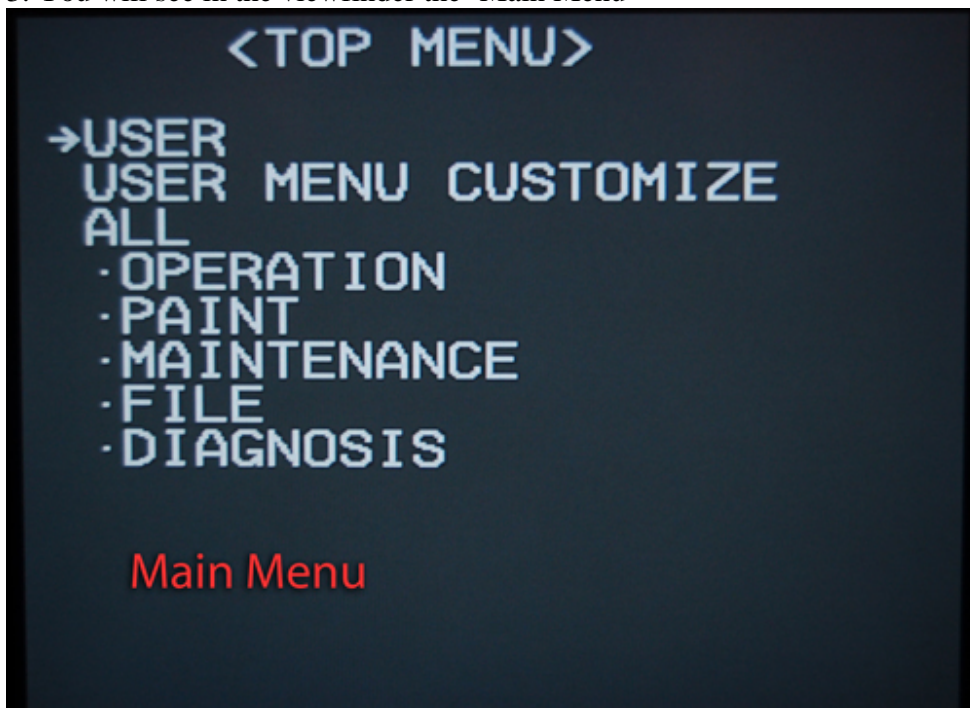


4. Using the encoder scroll to FILE menu then click

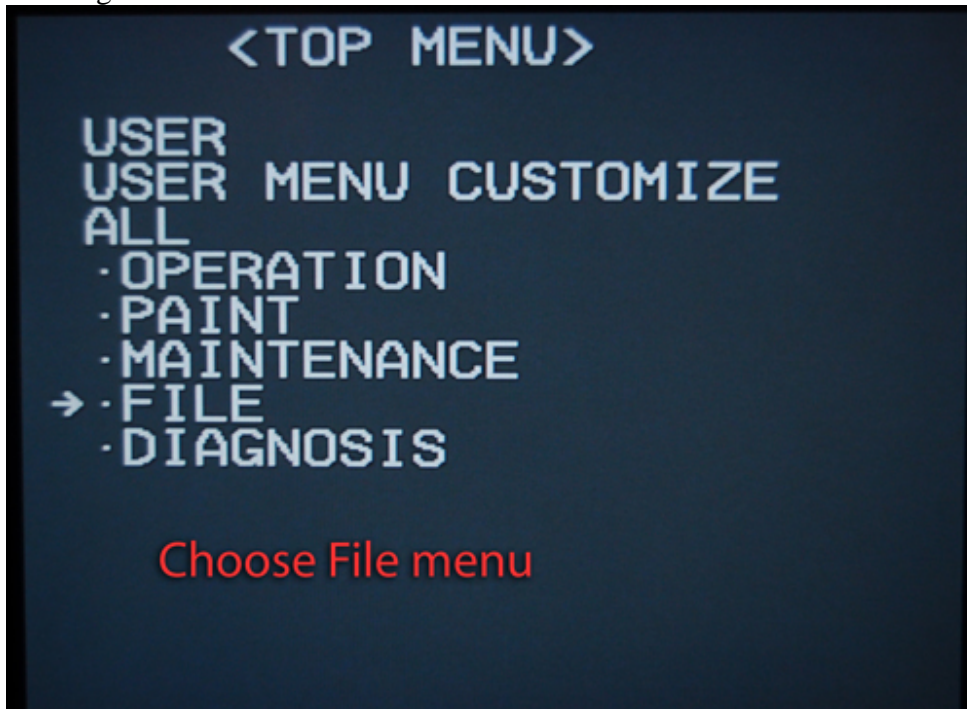


5. Scroll to page 3 then click

6. Scroll to ALL FILE LOAD then click

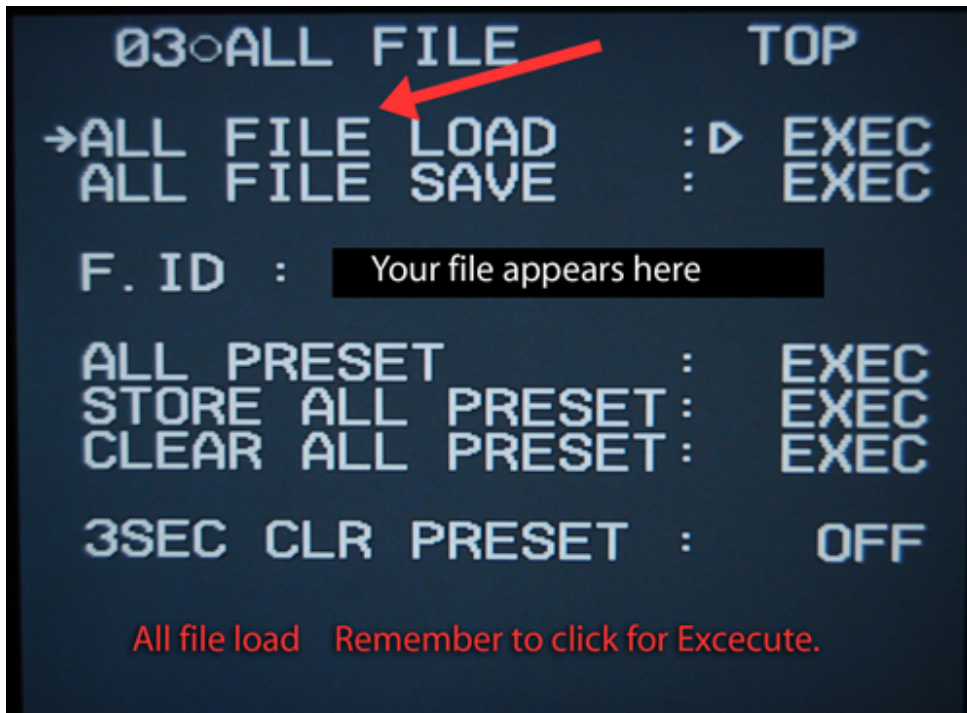

7 You now have the option to choose the file to recall.

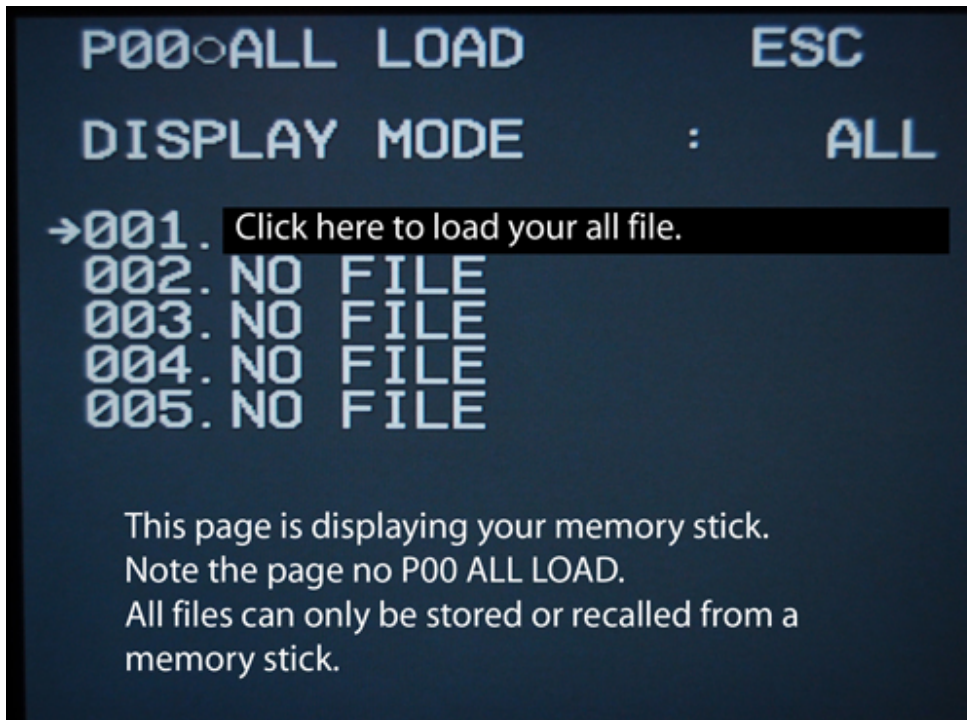

8. Viewfinder should display COMPLETE.

END

Note:

Memory stick pro does not work with the Sony HDW series cameras.

Use standard memory sticks from Sony or Lexar.

Do not format memory sticks on computers. They should only be formatted in the cameras.

There are 100 possible saves. Consisting of 20 pages with 5 saves per page.

The all file was setup must be done by a hire facility or professional camera Wrangler.

The rotary encoder has a dual function it's a scroll wheel and a click button.